



SZL-VL series





FEATURES

- Compact design for small mounting space
- Special design for easy wiring with ample wiring space
- Single Pole Double Throw, Double-break
- Zinc Diecast base and plastic cover
- Standard mounting dimensions
- 5 Ampere current capacity
- Long mechanical life
- Neon Lamp and LED indicator
- Flexible cable gland
- C-UL, CE approved
- IP64 Enclosure rating

APPLICATIONS

- Machine tools
- Material handling
- Food processing machines
- Conveyors
- · Packaging machines
- Gaming machines

DESCRIPTION

The new economical SZL-VL series miniature type limit switches are specially designed for applications of small mounting space.

These miniature switches are ideal for OEM machinery which requires a rugged and reliable limit switch that is capable of being mounted in space restricted applications. A wide range of actuators and optional operation indicators add additional flexibility. A special pre-molded flexible cable

gland allows for fast and simple wiring termination.

WARNINGS



- DO NOT USE this product as safety or emergency devices or in any other applications where failure of the product could result in a personal injury
- This information presented in this product sheet is for reference only.DO NOT USE this document as product installation information.

SZL-VL series

MODEL SELECTION GUIDE_____

				T
Actuator	Listings	Standard	Neon Lamp	LED
Side Rotary – Roller Lever Standard Plastic Roller	4	SZL-VL-A	SZL-VL-A-LE	SZL-VL-A-L3
Side Rotary - Roller Lever Standard Metal Roller	♣	SZL-VL-I	SZL-VL-I-LE	SZL-VL-I-L3
Side Rotary - Roller Lever Adjustable Plastic Roller	Ĥ	SZL-VL-B	SZL-VL-B-LE	SZL-VL-B-L3
Side Rotary - Roller Lever Adjustable Metal Roller	₽	SZL-VL-J	SZL-VL-J-LE	SZL-VL-J-L3
Side Rotary – Rod Adjustable	e _N	SZL-VL-C	SZL-VL-C-LE	SZL-VL-C-L3
Top Plunger	Д	SZL-VL-D	SZL-VL-D-LE	SZL-VL-D-L3
Cross Roller Plunger	Å	SZL-VL-E	SZL-VL-E-LE	SZL-VL-E-L3
Roller Plunger	Å	SZL-VL-H	SZL-VL-H-LE	SZL-VL-H-L3
Wobble - Plastic Rod Coil Spring	, ,	SZL-VL-F	SZL-VL-F-LE	SZL-VL-F-L3
Wobble - Coil Spring	7	SZL-VL-G	SZL-VL-G-LE	SZL-VL-G-L3

Note: In addition to the listings above, many more standard and special types are available on your specific application needs.

※	Num	berina	Scheme
,		~~9	

 ① Actuator

Refer to the table above

② Special Type

X Reserved

③ Indicator

None No indicator

LE Neon lamp(AC type) L3 LED(DC24V/2mA??)

TECHNICAL INFORMATION_____

■ Electrical Ratings

Types	Rated Voltage	Resistive Load (COS∳ ≒ 1)	Inductive Load (COS $\phi = 0.4$)
Standard type	AC125V	5 A	3 A
	AC250V	5 A	2 A
	DC125V	0.4 A	0.1 A
Neon Lamp type	AC125V	5 A	3 A
	AC240V	5 A	2 A
LED type	DC24V	3 A	-

■ Specifications

Circuitry		Single Pole Double Throw, Double Break		
Actuators		Refer to the model selection at page 2		
Opera	ating speed	Plunger type: 0.1 mm/s to 1,000 mm/s, Lever type: 1.0 mm/s to 1,000 mm/s		
Conta	act material	Gold-plated silver		
Contact re	sistance (Initial)	Max. 15 mΩ		
Insulation re	esistance (Initial)	Min. 100 MΩ at 500 VDC		
Dielectric strength		Between non-continuous terminals : 1,000 V. Between each terminal and non-current-carrying metal parts : 2,000 V. Between each terminal and ground : 2,000 V.		
1 :5-	Mechanical	10,000,000 operations (at max. operating frequency)		
Life Electrical		300,000 operations (at rated resistive load)		
Shock resistance		At free position : Max. 10 G At operation limit position : Max. 30 G		
Vibratio	n resistance	55 Hz at double amplitude of 1.5 mm (Indicator type : 10~55 Hz)		
Ambient temperature		-20 to 60 ℃		
Ambient humidity		Max. 95% RH		
Max. operating frequency		Plunger type : 120 operations/min, Lever type : 60 operations/min		
Package(size)		10 units in one package(H 50 × W 210 × L 303)		
Agency Approvals		C-UL,CE approved		
Sealing		IP64 Enclosure rating		
Weight		Approx. 149 g with SZL-VL-A		
Life of lamp		Min. 20,000 hours (Neon lamp type)		

SZL-VL series

Operating Characteristics

Characteristics Actuator	Operating Force O.F. max. (gf)	Release Force R.F. min. (gf)	Pretravel P.T. max. (mm)	Overtravel O.T. min. (mm)	Differential travel D.T. max. (mm)	Total Travel T.T. min. (mm)
Side Rotary – Roller Lever Standard	600	50	20°	75°	10°	95°
Side Rotary – Roller Lever Adjustable	342 to 800	21 to 50	20°	75°	10°	95°
Side Rotary – Rod Adjustable	203 to 800	12 to 50	20°	75°	10°	95°
Top Plunger	900	150	1.5	4	0.7	5.5
Cross Roller Plunger	900	150	1.5	4	0.7	5.5
Roller Plunger	900	150	1.5	4	0.7	5.5
Wobble – Plastic Rod Coil Spring	90	-	30	20	_	50
Wobble – Coil Spring	90	-	30	20	-	50


Approvals

Approval	Standard	File No.
C-UL	UL508	E150950
CE	EN60947-5-1	-


Indicator Rating

Indicator Type	Rated Operating Voltage	Operating Voltage Range	Internal Register
Neon Lamp	AC 100 to 200V	AC 80 to 240V	120 k Ω
LED	DC 24 to 48V	DC 20 to 55V	15 k Ω

Circuitry

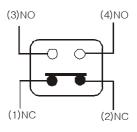

■ Electrical Life Curve

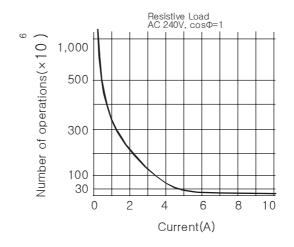


Notes: 1.The operating characteristics of indicator types are same with those of standard types above.

2.The operating characteristics of coil spring types are measured at the point of 5 to 10 mm from the actuator tip.


SZL-VL series

■ Exploded View

When you remove the cover, the internal terminal block is open wide to the front and sides. This gives you enough space to finish wiring work very easily. The flexible cable gland also allows for fast and simple termination wiring helping you install the switch in a mounting space restricted application.

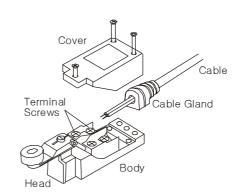


Mounting Dimensions

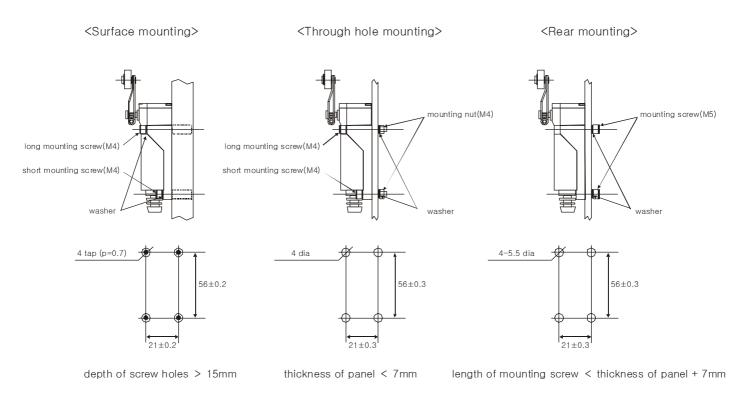

■ Head Direction Change

Side rotary types of SZL-VL limit switches provide the function of head direction change with 90° increment.

The operating head can be set to any of the four positions by loosening the head lock screw as shown in the picture.

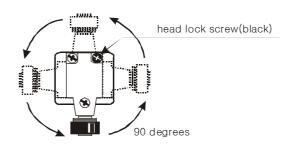

SZL-VL series

■ Indicator Type Switches

The AC neon lamp types are compatible with AC 100V and 200V range. The neon lamp sends out bright and clear light that helps your easy maintenance running for 20 thousand hours long.

The LED indicator types are compatible with DC 24V to 48V range using highly luminous twin LEDs.


Both types of indicator can be even brighter with the help of the diamond-shape cut transparent window

Free Position Mode> Free Position Mode> Insert the holder into the cover Indicator holder (Indicator ON at free position)

- The Indicator holder spring is aligned to fit to the NO contacts. Indicator is On when NC contacts are closed(at free position), then goes OFF when NO contacts are closed(when actuated).
- Every switch is shipped out of factory with this mode.

<Operation Mode>



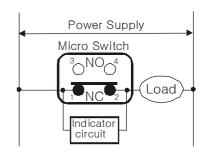


(Indicator ON when Actuated)

- The Indicator holder spring is aligned to fit to the NC contacts. Indicator is On when NO contacts are closed (when actuated), then goes OFF when NC contacts are closed(at free position).
- In order to use operation mode, rotate the indicator holder 180° so that the spring get aligned to the NC contacts.

<Indicator Mode Change>


- As shown in the picture, put a minus driver in the space between the holder and cover and remove the indicator holder by rotating the driver to the arrow direction.
- After removing the indicator holder, put it in the reversed direction
 and push it into the original position until a snap sound is heard.

 Make sure the springs rest completely on the terminal screws,
 otherwise the spring may be distorted, which leads to failure in lighting of
 indicator or short circuit.

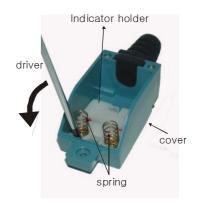


SZL-VL series

Dimensions

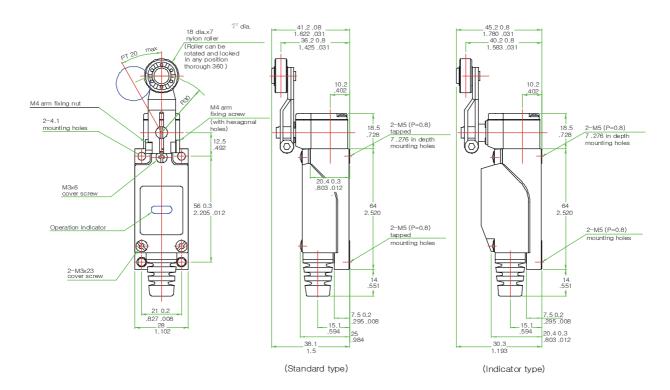


<SZL-VL-A>

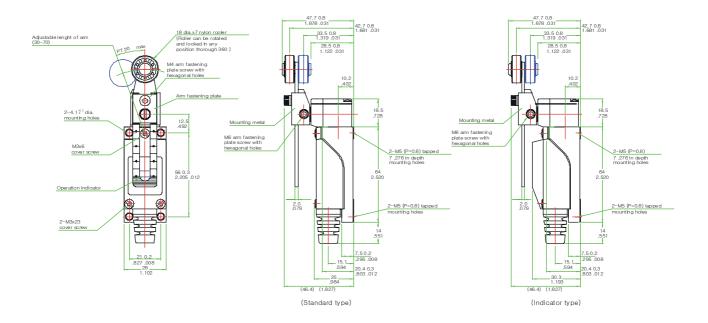


<SZL-VL-B>

SZL-VL series

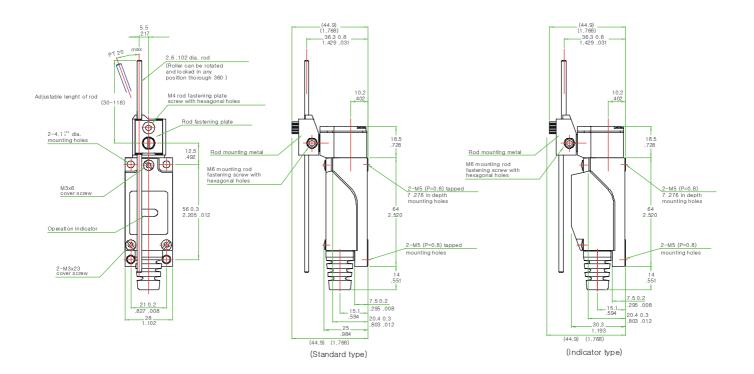



<SZL-VL-C>

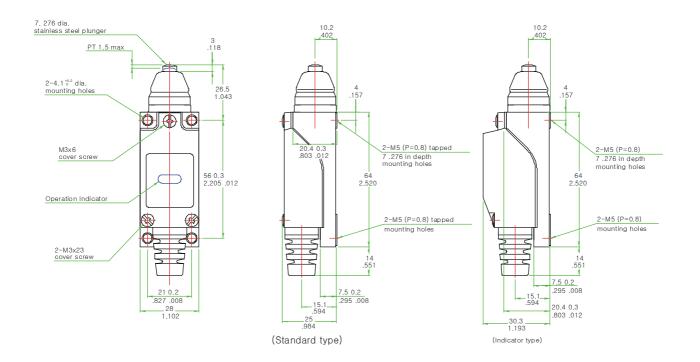


<SZL-VL-D>


SZL-VL series

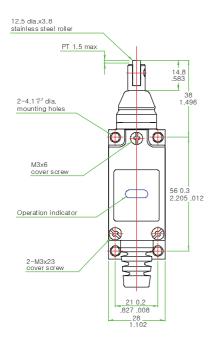

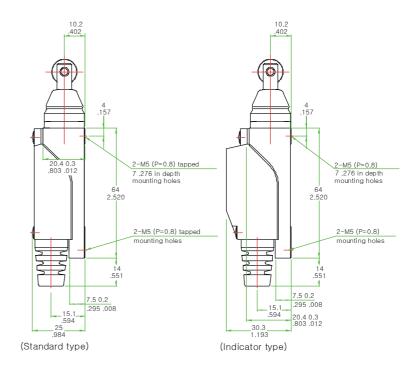


<SZL-VL-E>

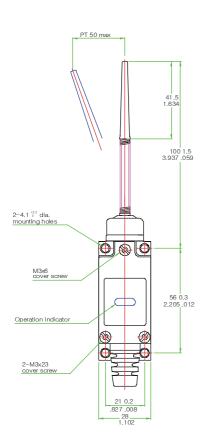

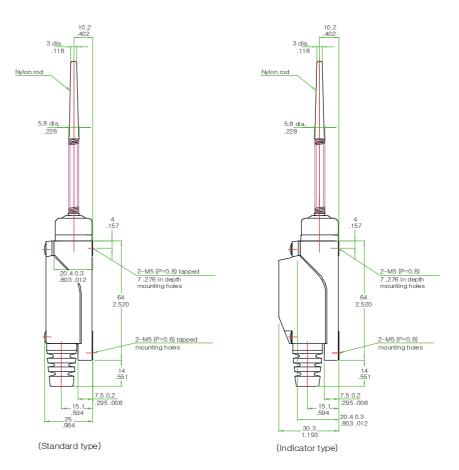


<SZL-VL-F>

SZL-VL series

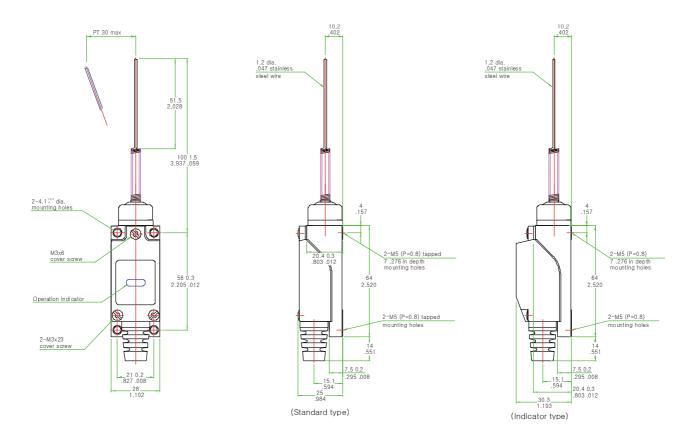

<SZL-VL-G>

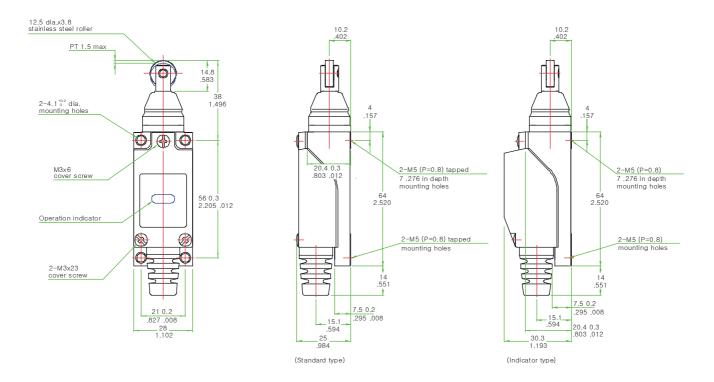

<SZL-VL-H>

SZL-VL series













In addition to the SZL-VL series, Honeywell offers one of the industry's widest range of components to meet virtually any application requirement. Please contact your local Honeywell office for more information.

SZL-VL series

Warranty/Remedy

Honeywell warrants goods of its manufacture as being free of defective material and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during that period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and

is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose.

While we provide application assistance, personally and through our literature, it is up to the customer to determine the suitability of the product in the application.

Specifications may change at any time without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

Sales and Service

Honeywell serves its customers through a worldwide network of sales offices and distributors. For application assistance, current specifications, pricing, or name of the nearest Authorized Distributor, contact your local sales office or

INTERNET: www.honeywell.com/sensing E-mail: info.sc@honeywell.com

ASIA PACIFIC

Sensing and Control Asia Pacific Headquarters Phone: +(65)355-2828 Fax: +(65)445-3033

Australia

Honeywell Limited Phone: +(61)2-9370-4500 Fax: +(61)2-9370-4525 Toll Free 1300-36-39-36 Toll Free Fax: 1300-36-04-70

China - PRC - Beijing Honeywell China Inc Phone: +(86-10)6561-0208 Ext.205

Fax: +(86-10)6561-0618

China - PRC - Shanghai Honeywell China Inc. Phone: +(86-21)6534-9181 Fax: +(86-21)6534-2248

China - Hong Kong S.A.R. Honeywell Ltd. Phone: +(852)2331-9133

Fax: +(852)2331-9998

China - PRC - Chengdu Honeywell China Inc. Phone: +(86-28)6786-348 Fax: +(86-28)6787-061

China — PRC - Guangzhou Honeywell China Inc. Phone: +(86-20)3879-1169 Fax: +(86-20)3879-1269

China - PRC - Shenzhen Honeywell China Inc. Phone: +(86)755-518-1226 Fax: +(86)755-518-1221

Indonesia

Honeywell Indonesia Pte Ltd. Phone: +(6221)521-3330 Fax: +(6221)521-3735

TATA Honeywell Ltd. Phone: +(91)20 532/6875 534 Fax: +(91)20 6875-992

.Janan

Honeywell Inc Phone: +(81)3 5440 1395 Fax: +(81)3 5440 1314

South Korea

Honewell Korea Co Ltd. Phone: +(822)799-6114 Fax: +(82)792-9011

Malaysia

Honeywell Engineering Sdn Phone: +(603)7958-4988 Fax: +(603)7958-8922

New Zealand

Honeywell Limited Phone: +(649)623-5050 Fax: +(649)623-5060 Toll Free 0800-202-088

Philippines

Honeywell Systems (Philippines)Inc. +(632)636-1649 Fax: +(632)636-1650

Singapore

Honeywell South East Asia Phone: +(65)355-2828 Fax: +(65)445-3033

Thailand

Honeywell Systems (Thailand) Ltd Phone: +(662)693-3099 Fax: +(662)693-3085

Taiwan R.O.C.

Honeywell Taiwan Ltd. Phone: +(8862)2245-1000 Fax: +(8862)2245-3242

EUROPE

Austria

6875-

Honeywell Austria GmbH Phone:+(43)1 727 80 366/246 Fax: +(43)1 727 80 337

Belgium

Honeywell SA/NV Phone: +(32)2 728 2522 Fax: +(32)2 728 2502

Bulgaria

Honeywell EOOD Phone: +(359)2 79 40 27 Fax: +(359)2 79 40 90

Czech Republic

Honeywell spol.s.r.o 3469/3424 Face +(420)2 Phone: Fax: +(420)2 6112 3461

Denmark

Honeywell A/S Phone: +(45)39 55 55 55 Fax: +(45)39 55 55 58

Finland

Honeywell OY Phone: +(358)9 3480101 Fax: +(358)9 34801375

Honeywell SA Phone: +(33)1 60 19 82 68 Fax: +(33)1 60 19 81 73

Germany

Honeywell AG Phone: +(49)69 8064 444 Fax: +(49)69 8064 442

Hungary

Honeywell Kft. Phone: +(361)451 4300 Fax: +(361)451 4343

Honeywell S.p.A. Phone: +(39)02 92146 450/ 456 Fax: +(39)02 92146 490

The Netherlands

Honeywell B.V. Phone: +(31)20 565 69 11 Fax: +(31)20 565 66 00

Honeywell A/S Phone: +(47)66 76 20 00 Fax: +(47)66 76 20 90

6112

Honeywell Sp.zo.o Phone: +(48)22 606 0900 Faz: +(48)22 606 0901

Portugal

Honeywell Portugal Lda Phone: +(351 21)424 50 00 Fax: +(351 21)424 50 99

Honeywell Bucharest Phone: +(40)1 2110076 Fax: +(40)1 2103375

of Independent States (CIS)

Z.A.O. Honeywell Phone: +(7 095)796 98 36 Fax: +(7 095)796 98 93

Slovak Republic

Honeywell s.r.o. Phone: +(421 7)58247 403

Fax: +(421 7)58247 415

South Africa(Republic of) Honeywell Southern Africa Honeywell S.A. Pty. Ltd. Phone: +(27)11 805 1211

Fax: +(27)11 805 1354

Spain

Honeywell S.A. Phone: +(34)91 313 6100 Fax: +(34)91 313 6129

Sweden

Honeywell AB Phone: +(46)8 775 55 00 Fax: +(46)8 775 56 00

Switzerland

Honeywell AG. Phone: +(41)1 855 24 40 Fax: +(41)1 855 24 45

Honeywell Turkey A.S. Phone: +(90)216 464 4764 Fax: +(90)216 464 4794

United Kingdom

Honeywell Control Systems Phone: +(44)118 906 2600 Fax: +(44)118 981 7513

Mediterranean & African

Distributors

Honeywell SpA Phone: +(39)2 921 46 232 Fax: +(39)2 921 46 233

Middle East Headquarters

Honeywell Middle East Ltd. Phone: +(9712)443 2119 Fax: +(9712)443 2536

NORTH AMERICA

Canada

Honeywell LTD. Phone: 1-800-737-3360 Fax: 1-800-565-4130

USA

Honeywell Sensing and Control, International Headquarters Phone: 1-800-537-6945 1-815-235-6847 Fax: 1-815-235-6545 E-mail:info.sc@honeywell.com LATIN AMERICA

Argentina

Honeywell S.A.I.C Phone: +(54 11)4383-3637 Fax: +(54 11)4325-6470

Honeywell do Brasil & Cia Phone: +(55 11)7266-1900 Fax: +(55 11)7266-1905

Honeywell Chile, S.A. Phone: +(56 2)233-0688 Fax: +(56 2)231-6679

Columbia

Honeywell Columbia, S.A Phone: +(57 1)623-3239/3051 Fax: +(57 1)623-3395

Fcuador

Honeywell S.A. Phone: +(593 2)981-560/1 Fax: +(593 2)981-562

Honewell S.A. de C.V. Phone: +(52 5)259 1966 Fax: +(52 5)570-2985

Puerto Rico

Honeywell Inc. Phone: +(809)792-7075 Fax: +(809)792-0053

Venezuela

Honeywell CA Phone: +(58 2)238-0211 Fax: +(58 2)238-3391

Honeywell

Sensing & Control

Honeywell Korea. 191, Hangangro-2 Ga, Yongsan-Gu Seoul 140-702 Korea

www.honeywell.com/sensing

on 50% Recycled Paper

Printed with Soy Ink

 $email: S\&C_AP@singapore.honeywell.com$